
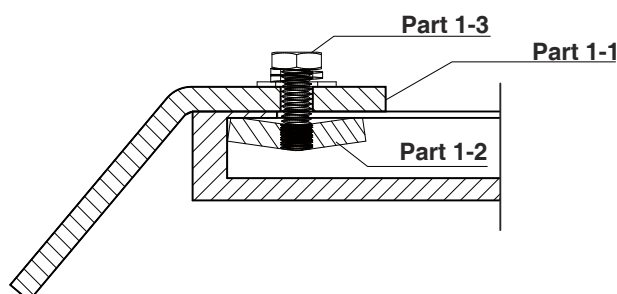


Universal Flat Mount Bracket Kit


SLB-0119
Installation Manual

The Solarland® SLB-0119 mounting kit has been specifically design for use with the Solarland® SLP Series 3W – 5W panels. This mount is a fixed.

Components And Parts

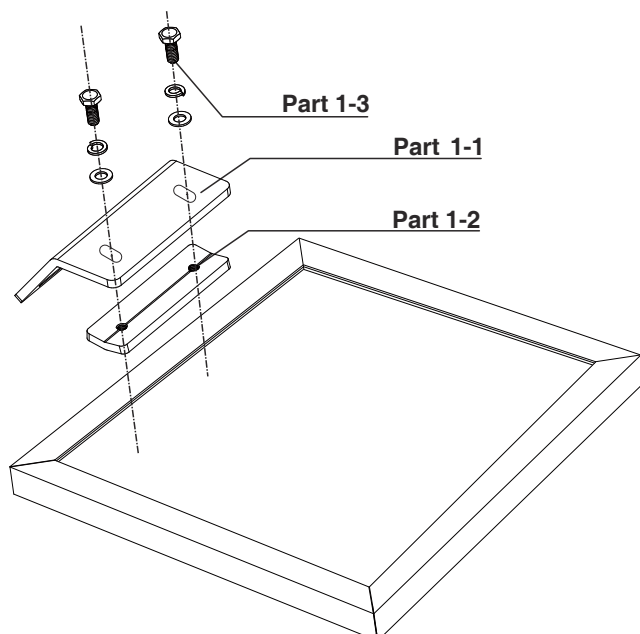


Part

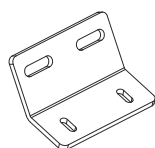

Part 1-1

Component	Fixed Bracket
Material	5052Al
Quantity	1

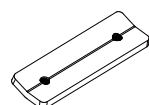

Part 1-2

Component	Clamp
Material	5052Al
Quantity	1



Part 1-3

Component	Module Bolt(M6)
Material	AISI304
Quantity	2

Step1.

Attach the PV module to the mounting bracket using the clamp, bolts, washers and lock washers provided. We suggest you lubricate all nuts and bolts to facilitate easy removal at a later date.

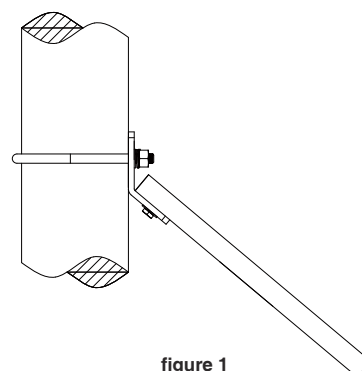


figure 1

Step2.

For pole mounting, use U bolts or steel clamps to fix the PV module and mount assembly to the pole. See figure 1. The tilt angle of the PV is situated at 40° to the horizon. The U-Bolts and/or steel clamps are not included in the kit.

Note:

For vertical wall mounting, drill holes on the mounting place to be installed according to size of the fixed bracket. Embed two molly bolts into the mounting surface. See figure 2.

Use washers and, lock washers and nuts to secure the PV module and mount assembly to the wall surface.

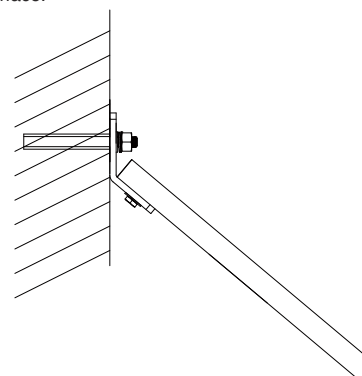


figure 2